

# Konami Classic Pinout

<b>(STANDARD) KONAMI CLASSIC</b>		
<b>Solder Side</b>		<b>Parts Side</b>
- 5 Volts	<b>A 1</b>	+12 Volts
Speaker -	<b>B 2</b>	Speaker +
P2 Button 2	<b>C 3</b>	P2 Button 1
P2 Left	<b>D 4</b>	P2 Right
P1 Start	<b>E 5</b>	P2 Start
P1 Button 1	<b>F 6</b>	P2 Up
P1 Button 2	<b>H 7</b>	Service Switch
P1 Right	<b>J 8</b>	P1 Left
P1 Up	<b>K 9</b>	P2 Down
Coin 1	<b>L 10</b>	Coin 2
P1 Down	<b>M 11</b>	Coin Counter 1
P1 Button 3	<b>N 12</b>	Coin Counter 2
Video Green	<b>P 13</b>	Video Blue
Video Red	<b>R 14</b>	Video Sync
Not Used	<b>S 15</b>	P2 Button 3
Ground	<b>T 16</b>	Ground
Ground	<b>U 17</b>	Ground
+5 Volts	<b>V 18</b>	+5 Volts

<b>(GYRUSS)</b>		
<b>KONAMI CLASSIC</b>		
<b>Solder Side</b>		<b>Parts Side</b>
- 5 Volts	<b>A</b>	<b>1</b> +12 Volts
Speaker -	<b>B</b>	<b>2</b> Speaker +
P2 Button 2	<b>C</b>	<b>3</b> Not Used
P2 Left	<b>D</b>	<b>4</b> P2 Right
P1 Start	<b>E</b>	<b>5</b> P2 Start
Not Used	<b>F</b>	<b>6</b> P2 Up
P1 Button 2	<b>H</b>	<b>7</b> Service Switch
P1 Right	<b>J</b>	<b>8</b> P1 Left
P1 Up	<b>K</b>	<b>9</b> P2 Down
Coin 1	<b>L</b>	<b>10</b> Coin 2
P1 Down	<b>M</b>	<b>11</b> Coin Counter 1
Not Used	<b>N</b>	<b>12</b> Coin Counter 2
Video Green	<b>P</b>	<b>13</b> Video Blue
Video Red	<b>R</b>	<b>14</b> Video Sync
Speaker -	<b>S</b>	<b>15</b> Speaker +
Ground	<b>T</b>	<b>16</b> Ground
Ground	<b>U</b>	<b>17</b> Ground
+5 Volts	<b>V</b>	<b>18</b> +5 Volts

### **KONAMI CLASSIC GAMES**

- Circus Charlie
- Gyruss / Venus
- Hyper Sports / Hyper Olympic '84
- Mega Zone
- Mikie / Shinnyuushain Tooru-kun / Mikie Highschool Graffiti
- Road Fighter
- Roc'n Rope
- Shao-Lins Road / Kicker
- Super Basketball
- Track & Field / Hyper Olympic
- Yie Ar Kung Fu

