


IREM CLASSIC TO JAMMA ADAPTER

WWW.ARCANIAC.COM

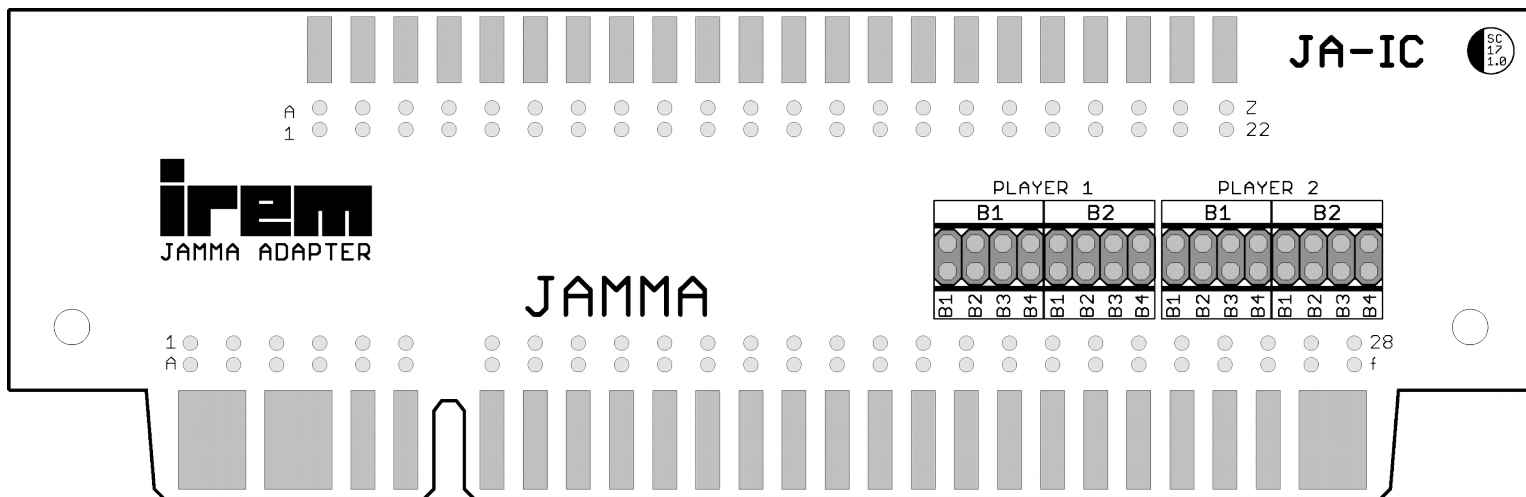

Designed to redirect IREM Classic game PCB signals to work properly in a JAMMA cabinet or with a Supergun. This adapter features a button remapper.

Button Remapper.

Allows you to easily reconfigure the action buttons to your personal preferences for both players independently.

Compatible games.

Tested on original games only. A bootleg game PCB may use a different pinout.

IREM CLASSIC

- 10-Yard Fight / VS 10 Yard Fight
- Atomic Boy / Willy Tower
- Horizon
- Kid Niki: Radical Ninja / Kaiketsu Yanchamaru
- Kung-Fu Master / Spartan X
- Lode Runner
- Lode Runner – Golden Labyrinth / Lode Runner – Majin No Fukkatsu
- Lode Runner – Teikoku Karano Dasshutsu
- Lode Runner – The Bungeling Strikes Back
- Lot Lot
- Moon Patrol
- Spelunker
- Spelunker II
- The Battle-Road
- Traverse USA / MotoRace USA / Zippy Race
- Tropical Angel
- Youjyuden

Pinout.

IREM CLASSIC (PCB pin numbers)			
Parts Side			Solder Side
Ground	1	2	Ground
Ground	3	4	Ground
NC	5	6	NC
Coin Counter 1	7	8	NC
P1 Left	9	10	P2 Left
P1 Right	11	12	P2 Right
P1 Button 2	13	14	P2 Button 2
P2 Start	15	16	P1 Start
NC	17	18	Coin Counter 2
Coin 2	19	20	Video Sync
+12 Volts	21	22	+12 Volts
+12 Volts	23	24	+12 Volts
Speaker -	25	26	Speaker +
P1 Button 1	27	28	P2 Button 1
Video Red	29	30	Video Green
Video Blue	31	32	NC
P2 Up	33	34	P2 Down
P1 Up	35	36	P1 Down
Service	37	38	Coin 1
+5 Volts	39	40	+5 Volts
+5 Volts	41	42	+5 Volts
Ground	43	44	Ground

IREM CLASSIC (Edge connector numbers)			
Parts Side			Solder Side
Ground	22	Z	Ground
Ground	21	Y	Ground
NC	20	X	NC
Coin Counter 1	19	W	NC
P1 Left	18	V	P2 Left
P1 Right	17	U	P2 Right
P1 Button 2	16	T	P2 Button 2
P2 Start	15	S	P1 Start
NC	14	R	Coin Counter 2
Coin 2	13	P	Video Sync
+12 Volts	12	N	+12 Volts
+12 Volts	11	M	+12 Volts
Speaker -	10	L	Speaker +
P1 Button 1	9	K	P2 Button 1
Video Red	8	J	Video Green
Video Blue	7	H	NC
P2 Up	6	F	P2 Down
P1 Up	5	E	P1 Down
Service	4	D	Coin 1
+5 Volts	3	C	+5 Volts
+5 Volts	2	B	+5 Volts
Ground	1	A	Ground